

Cinia reititin CTS FRW5 - 3105



Reitittimen etupaneeliin kytketään ohut (keltainen) valokaapeli ja valokaapelin toinen pää kytketään sisärasiaan. Kaapelin kytkennässä on huomioitava suojatulppien poiston jälkeen, ettei kosketa valokaapelin kuitua (kaapelin päitä).

Keltaisiin RJ45 liittimiin ethernet-kaapeli (televisio-boksi tai tietokone).

Liitynnät

Etupaneeli Reitittimen etupaneelin liittimestä 1 kytketään ohut valokaapeli (keltainen) sisärasiaan.



Takapaneeli



- 1. WPS
- 2. WAN (ei käytössä)
- 3. LAN (kytketään IPTV (televisio) boksi ja/tai tietokone), huom! Lan4 portti on tarkoitettu testi- ja erikoistarkoituksiin (sillattu portti)
- 4. USB
- 5. Voidaan sammuttaa reitittimen päällä olevat ledit (virtaledi jää)
- 6. Kytketään virtalähteen pistoke

Reitittimen sulkeminen tapahtuu irrottamalla virtalähteen pistoke tai irrottamalla virtalähde pistorasiasta.

Kaakamon tietoverkko-osuuskunta



Sisärasia

Valokaapeli (keltainen) kytketään sisärasian sisempään liittimeen. Sisärasian liittimestä poistetaan suojatulppa ja valokaapelin liitin painetaan paikalleen.



Kytkentä



Kaakamon tietoverkko-osuuskunta



Reitittimeen on kiinnitetty kotelo, jonka avulla reititin voidaan kiinnittää seinään tai laittaa tasopinnalle (esim. kaapin päälle).



Kotelon sisällä on valokaapelia n. 2 m, jota voidaan ottaa käyttöön sijoituspaikan mukaan.

Kotelo avautuu nostamalla etureunan kansi ylöspäin reitittimen reunasta.





Kotelon kulmaan voidaan loveta aukko kaapelia varten.

Kotelossa on rei'itys seinäkiinnitystä varten.

1.11.2019



Tietokoneen yhdistäminen reitittimen verkkoon

Ethernet kaapelilla

Kytketään kaapeli reitittimen LAN – liittimeen (keltainen liitin) ja tietokoneen verkkoliittimeen.

Tai

Wi-FI/wlan

Wi-Fi :ä varten SSID (verkon nimi) ja salasana (avain) on merkitty reitittimen pohjaan, sekä pakkauslaatikossa olevaan tarraan.

Reititin tarjoaa kahta wlan – verkkoa, taajuutta: 5GHz ja 2.4GHz.

2.4GHz on yleisempi ja kuuluu laajemmalle alueelle.

Reitittimen asetusten muutos

Reitittimen asetuksia voi tarkistaa ja tarvittaessa muuttaa tietokoneella, joka on yhdistetty reitittimen tarjoamaan verkkoon. Reitittimessä on oletusasetukset, joilla Cinia palvelut toimii.

Reitittimen hallintayhteys

- 1. Yhdistetään tietokone reitittimen kanssa samaan verkkoon
- 2. Avataan tietokoneeseen selain (IE, Edge, Chrome jne.)
- 3. Kirjoitetaan selaimen osoiteriville reitittimen verkko-osoite (IP numero) 192.168.0.1



4. Hallintasivulle syötetään käyttäjätunnus ja salasana.

Oletus käyttäjätunnus: admin ja oletuksena salasana jätetään tyhjäksi **Huom**! Yhteyden avaamisen jälkeen reititin lataa Cinia :n asetukset ja samalla muuttuu kirjautumistunnukset: käyttäjätunnus: user ja salasana CTSadministrator.

← → C ☆	 Ei turvallin 	nen 192.168.0.1/cgi-bin/index.cgi	
FWR5-3105SFP-CW	S AC-DR	Login	
setup		Please login	
System Information		Ent <mark>er Administrator Name</mark>	admin
System Information DDNS Network Setup		Ent <mark>er Administrator Name</mark> Enter Admin <mark>istrator Password</mark>	admin
System Information DDNS Network Setup NIFI	.4	Ent <mark>er Administrator Name</mark> Enter Admin <mark>istrator Password</mark>	admin



5. Hallintasivun kirjautumissalasanan muutos valikosta: Administration – User Privilege ja 'Action' – sarakkeesta.

Account State Privilege Level User Name Add New User Authentication Add New User Authentication Add New User Authentication Account State Privilege	licar Privilana			
Visco State Visco State <th>User Drivilena</th> <th></th> <th></th> <th></th>	User Drivilena			
Account State Privilege Level User Name Add New User Authentication Add New User Authentication Account State Enable User Name admin	- oser rivinege			
Account State Privilege Account State Privilege Level User Authentication Account State Privilege Add New User Authentication Add New User Authentication Account State Privilege Add New User Authentication Account State Privilege Add New User Authentication Account State Enable SuperUser admin Password Console Level SuperUser Console Level SuperUser Cancel	Account State Brivilege Level	liner Name	Description	- Arrian
Curry Image: Curry generations Curry	Enable SuperUser	admin	bescription	· 🖻
december december december december user Privilege Account State Privilege Level User Authentication Add New User Authentication Add New User Authentication Account State Enable SuperUser admin Password Console Level SuperUser Getter Cancel				
Account State Privilege Level User Name Descr Enable SuperUser admin Add New User Authentication Add New User Authentication Account State Enable Account State Enable SuperUser admin Add New User Authentication Account State Enable User Name admin Password Retype Password Console Level SuperUser Cancel	Add New User Authentication			
Account State Privilege Level User Name Descr Enable SuperUser admin Add New User Authentication Account State Enable I user Name Descr Enable SuperUser I user Name Descr Enable SuperUser I user Name I user I user Name I u				
Device Access Device Access The agent of the				
Developments The synathic syn				
The sense of the s				
User Privilege Account State Privilege Level User Name Description Add New User Authentication Add New User Authentication Add New User Authentication Add New User Authentication Enable Enable Enable System admin Password Image: Console Level Enable Console Level SuperUser Image: Console Level Enable Image: Console Level				
User Privilege Account State Privilege Level User Name Description Cancel				
User Privilege Account State Privilege Level User Name Description Add New User Authentication Add New User Authentication Add New User Authentication Account State Enable Image: SuperUser admin Add New User Authentication Account State Enable User Name admin Password Image: SuperUser Console Level SuperUser OK Cancel				
User Privilege Account State Privilege Level User Name Add New User Authentication Add New User Authentication Add New User Authentication Account State Enable Iser Name admin Password Image Password <td></td> <td></td> <td></td> <td></td>				
User Privilege Account State Privilege Level User Name Description Add New User Authentication				
User Privilege Account State Privilege Level User Name Add New User Authentication Add New User Authentication Add New User Authentication Add New User Authentication Account State Enable User Name admin Password Image: Console Level SuperUser Cancel				
Account State Privilege Level User Name Description	7			
Account State Privilege Level User Name Description Add New User Authentication Add New User Authentication Add New User Authentication Account State Enable Image: Console Level SuperUser Ok Cancel				
Account State Privilege Level User Name Description				
Enable SuperUser admin Add New User Authentication Add New User Authentication Account State Enable User Name admin Password	Privilege Level	U	ser Name	Descrip
Add New User Authentication Add New User Authentication Account State Enable User Name admin Password Retype Password Description Console Level SuperUser	SuperUser	а	dmin	
Add New User Authentication > Add New User Authentication Account State Enable User Name admin Password Retype Password Description Console Level SuperUser				
> Add New User Authentication Account State Enable User Name admin Password Retype Password Description Console Level SuperUser				
> Add New User Authentication Account State Enable User Name admin Password Retype Password Description Console Level SuperUser OK	ntication			
> Add New User Authentication Account State Enable User Name admin Password Retype Password Description Console Level SuperUser OK				
Account State Enable User Name admin Password Retype Password Description Console Level SuperUser CAncel	Authentication			
Account State Enable User Name admin Password Retype Password Description Console Level SuperUser Cancel Cancel				
User Name admin Password Retype Password Description Console Level SuperUser Cancel Cancel	Enable 🔻			
Password Retype Password Description Console Level SuperUser Cancel Cancel	admin			
Password Retype Password Description Console Level SuperUser Cancel Cancel	Continu			
Retype Password Description Console Level SuperUser CAncel				
Description Console Level SuperUser OK Cancel	[
Console Level SuperUser Concel				
Console Level SuperUser OK Cancel	1			
OK Cancel	Superliser			
OK Cancel	superoser +			
Califer	cel			
	(Cer			
		Account State Privilege Level Cad New User Authentication Privilege Level SuperUser ntication r Authentication Enable GuperUser SuperUser cel	Account State Privilege Level User Name Enable SuperUser a Privilege Level U SuperUser a ntication r Authentication Enable admin SuperUser SuperUser Cel	Account State Privilege Level User Name Description Enable SuperUser admin Privilege Level User Name SuperUser admin



6. Suljetaan yhteys hallintasivulle

Valikosta: Administration – Save&Logout → 'Logout Device' – painikkeella.

S FWR5-3105SFP-CW-AC-	DR versi 🗙	+	
\leftrightarrow \circ \circ \circ	Ei turvallin	n 192.168.0.1/cgi-bin/index.cgi	
FWR5-3105SFP-CW-AC	S DR	Save & Logout	
Setup	<	Save Configuration Save Configuration	
WIFI		Logout Device Logout Device	
Security	*	Reboot Device Reboot Device	
Applications	~	Next bootup Image Image-2 V Set Next bootup Image (Current bootup Image 2)	ĵ.
QoS	<		
IPTV	٠.		
Management	ج.		
Administration			
Device Access			
Interface Mgmt			
Time			
Syslog			
Diagnostics			
User Privilege			
Pactory Denault			
Firmware Maintenance			
SaveBLogout			
Status	*		